


Air Conditioning and Audio Systems

- 80 *Ventilation*
- 83 *A/C Control Panel*
- 85 *A/C Control Interface*
- 90 *Infotainment System **

AIR CONDITIONING AND AUDIO SYSTEMS

Ventilation

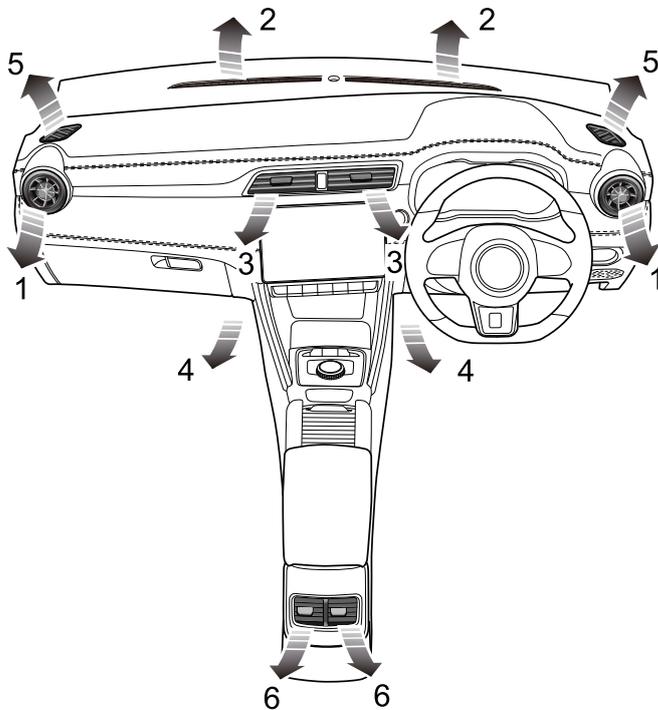

- 1 Side Vents
- 2 Windscreen/Defrost Vents
- 3 Centre Vent
- 4 Front Footwell Vents
- 5 Front Side Window Vents
- 6 Centre Console Vents

AIR CONDITIONING AND AUDIO SYSTEMS

The air conditioning system is used to adjust the temperature, speed, humidity and cleanliness of the air in the car. Fresh air is drawn in through the air intake grille at the base of the front windscreen and A/C filter.


Always keep the air intake grille clear of obstructions such as leaves, snow or ice.

A/C Filter

The A/C filter is used to filter air. To remain fully effective, the filter should be replaced at the recommended service interval.

Vents

Centre Vents

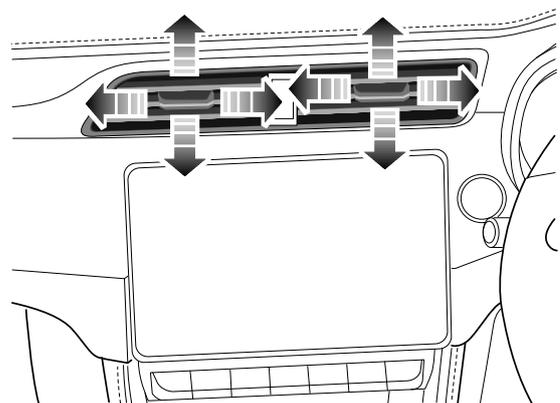


Slide the button in the centre of the louvres to the left or right to open or close the vent.

Toggle the button at the centre of each vent up and down, left and right to regulate the air direction.

AIR CONDITIONING AND AUDIO SYSTEMS


Side Vents

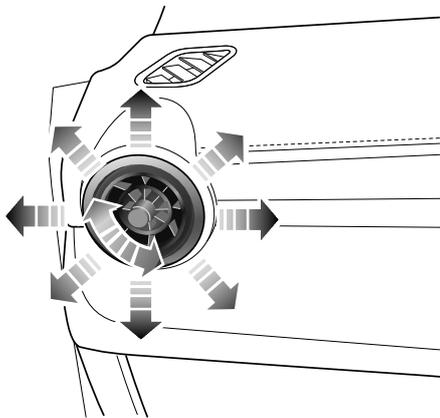

Rotate the centre thumb-wheel clockwise or anti-clockwise to open or close the vent.

Toggle the centre thumb-wheel up, down, left or right to adjust the air direction.

Centre Console Vents

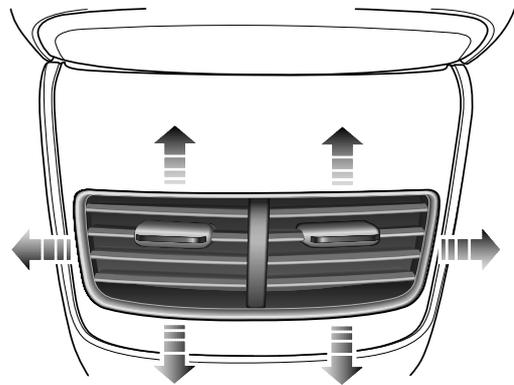


Slide the button in the centre of the louvres to the left or right to open or close the vent.

Toggle the button at the centre of each vent up and down, left and right to regulate the air direction.

AIR CONDITIONING AND AUDIO SYSTEMS

A/C Control Panel

Control Panel

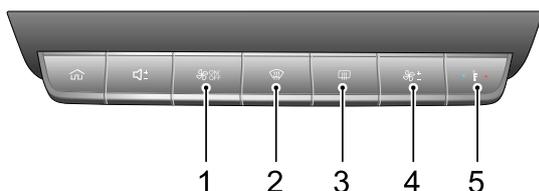

- 1 A/C Control Shortcut
- 2 Defrost/Demist Button
- 3 Heated Rear Window Button
- 4 Blower Speed Control Button
- 5 Temperature Control Button

A/C Control Shortcut



Short press the A/C control shortcut to display the air conditioning interface on the infotainment screen.

Long press the A/C control shortcut to switch the system on, all functions will revert to the state before shutdown. Long press again to switch off.

Defrost/Demist



Press Defrost/Demist Button on the control panel, the indicators on the button and display illuminate, the A/C cooling and external circulation functions are switched on, and the system enters the defrost/demist function to clear the windshield and side windows.

Press again to switch off. The indicator will go off and the system will return to the previous state

Whilst the defrost/demist is selected, operate the A/C on/off button to turn the compressor on/off; operate the air recirculation button to switch between internal recirculation and external circulation; operation of either

AIR CONDITIONING AND AUDIO SYSTEMS

of these functions will not affect the defrost/demist function; operation of any other air distribution modes will quit defrost/demist.

Heated Rear Window




The heating elements on the inside of the rear window are easily damaged. DO NOT scrape or scratch the inside of the glass. DO NOT stick labels over the heating elements.



Press the Heated Rear Window Button to switch the function on or off. The button indicator illuminates when the function is on, and is extinguished when the function is off. The heated rear window features a timer function and will automatically switch off after a preset time. To continue to use the heated rear window, operate the button again.

Blower Speed Control Button

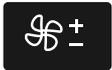

Press the blower speed control button upward or downward to regulate the blower speed.

Temperature Control Button



Press the temperature control button upward or downward to regulate the temperature of the air supplied by the vents.

AIR CONDITIONING AND AUDIO SYSTEMS

A/C Control Interface

Control Interface - Connected Car *



- 1 Air Distribution Mode Control
- 2 System On/Off
- 3 Cooling On/Off
- 4 Auto Mode
- 5 A/C Setting
- 6 Air Circulation Mode
- 7 Blower Speed Control
- 8 Temperature Control

AIR CONDITIONING AND AUDIO SYSTEMS

Control Interface - Non Connected Car *



- 1 Air Distribution Mode Control
- 2 System On/Off
- 3 Cooling On/Off
- 4 Auto Mode
- 5 A/C Setting
- 6 Air Circulation Mode
- 7 Blower Speed Control
- 8 Temperature Control

AIR CONDITIONING AND AUDIO SYSTEMS

Temperature Control

Touch the temperature control touch button to regulate the temperature of the air supplied by the vents.

Cooling On/Off

Touch the cooling On/Off touch button to operate the cooling function.

Note: *A small amount of water may remain in the air conditioner after usage, this may produce a peculiar smell. If this is a particular issue, it is recommended to switch off the cooling function and run the blower for a while.*

Auto Mode

Set the target temperature required and then press the AUTO touch button to enable the auto mode function. In auto mode, the air distribution mode, blower speed and other functions are automatically adjusted to reach and maintain the required temperature.

Manually adjust the air distribution mode or blower speed to exit auto mode. In this case the AUTO indicator will extinguish.

Note: *To ensure the auto mode operates efficiently, all windows and the sunroof must be closed and the air inlet grille must be clear of obstructions. In addition, the A/C Auto control sensor should not be covered.*

System On/Off

Touch the system On/Off touch button to switch the system on or off.

Blower Speed Control

Touch the blower speed control touch button to regulate the blower speed.

Air Distribution Mode

Select the corresponding Air Distribution Mode Touch Button as required to regulate the air distribution mode.

Touch Button On	Air Distribution Mode
	To 'Face'
	To 'Face + Feet'

AIR CONDITIONING AND AUDIO SYSTEMS

Touch Button On	Air Distribution Mode
	To 'Feet'
	To 'Feet + Windscreen'
	To 'windscreen'

Note: The air distribution mode can also be switched by touching the air outlet area of the control interface.

To 'Face'. Directs airflow to the side and centre vents.

To 'Face + Feet'. Directs air to footwell, side and centre vents.

To 'Feet'. Directs air to footwell vents.

Note: In this mode, a small amount of airflow will be directed to the side, front side window and front windscreen vents.

To 'Feet + Windscreen'. Directs air to the footwell, front windscreen and front side window vents.

Note: In this mode, a small amount of airflow will be directed to the side vents.

To 'windscreen'. Directs air to the windscreen/defrost and front side window vents.

Note: In this mode, a small amount of airflow will be directed to the side vents.

Air Circulation Mode

Touch the air recirculation mode touch button to switch between air recirculation modes.



During internal recirculation, the air conditioning system circulates the air inside the car to meet the requirements of rapid cooling or heating, and at the same time, it can prevent the entry of traffic fumes.



During the external circulation, the air conditioning system draws air from outside the vehicle to ensure fresh air enters the vehicle.

AIR CONDITIONING AND AUDIO SYSTEMS



During automatic circulation, the air conditioning system can automatically adjust the internal recirculation or external circulation according to the situation.

Note: *Leaving the system in internal recirculation mode can cause the windscreen to mist. If this happens, turn on the defrost/demist mode.*

AIR CONDITIONING AND AUDIO SYSTEMS

Infotainment System *

Important Safety Information

- Do not attempt to fit, repair or modify the entertainment system by yourself, there are high-voltage components in the device, which may cause electric shock. For internal inspection, adjustment or repair, please consult a local MG Authorised Repairer.
- Do not allow this entertainment and navigation system to come into contact with liquids. If liquids or foreign objects enter into this entertainment and navigation system, please park your vehicle in a safe place, immediately switch off the power and contact a local MG Authorised Repairer. Do not use the entertainment and navigation system in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, abnormal noises or odours from the entertainment system, or any other abnormal signs on the screen, switch the power off immediately and contact a local MG Authorised Repairer for service.

Using this entertainment system in this condition may result in permanent damage to the system.

- Operation of the navigation or video functions of the system is prohibited whilst the vehicle is in motion. MG Motor accepts no responsibility for any consequences caused by this operation. Please park your vehicle in a safe location select Park and apply the parking brake before making the necessary adjustments or watching Video.
- Particularly high or particularly low temperatures will interfere with normal operation. If the vehicle has not been used, is parked in direct sunlight or in particularly cold conditions, the car may become particularly hot or cold, in this environment the system may not work properly. Once the temperature inside the car is back to normal, the system will resume normal function. If it does not resume, please contact a local MG Authorised Repairer for assistance.
- Excessive use of the entertainment and navigation system without the vehicle being driven or in READY mode can drain the vehicle low voltage battery.

AIR CONDITIONING AND AUDIO SYSTEMS

- Your navigation is only a guide, you must always consider and follow the traffic signs, and drive according to road conditions; if you deviate from the recommended route, the entertainment and navigation system will change the directive accordingly.
- When using a mobile phone, keep the antenna of the mobile phone away from the screen to prevent the disruption of video signal in the form of spots, colored stripes, etc. on the screen.

Privacy and Data Sharing

When using this entertainment system for the first time, you must read the Privacy Policy carefully and make a choice.

In the settings interface of the entertainment system, you can authorise / disable the data sharing service at any time. Please note that once disabled, the relevant functions will not be available.

Note: Restoring factory settings or upgrading software may require you to reauthorise data sharing services.

Cautions for Using Screen

- To protect the screen against damage, be sure to touch the panel buttons with your finger (a touch pen can be used for special calibration).
- Please protect the screen against direct sunlight. Extended exposure to direct sunlight will result in screen malfunction due to high temperature.
- When the temperature is above or below the operating temperature range (-30°C to +85°C), please do not use the LCD screen, the screen may not operate normally and could be damaged.
- Do not use excessive force to drag and drop or press the screen, damage or scratching may occur.
- To remove dust from the screen or clean the screen, please turn the system off first, and then wipe with a dry soft cloth. When wiping the screen, take care not to scratch the surface. Do not use irritative or abrasive chemical cleaners.

AIR CONDITIONING AND AUDIO SYSTEMS

Basic Operations

Control Panel



1  (HOME) Button

Short press to return to the main interface ; continue to press for about 10 seconds to restart the system.

2 Volume Adjustment Button

Main System Interface

Page One



1 Apple CarPlay

Touch to enter the Apple CarPlay interface.

2 Energy Management

AIR CONDITIONING AND AUDIO SYSTEMS

Touch to enter the Energy Management interface.

3 Android Auto

Touch to enter the Android Auto interface.

4 Radio/Music

Touch to enter the Radio/Music interface.

5 Navigation

Touch to enter the Navigation interface. Refer to Navigation Manual for details.

6 Status Bar

Displays signal strength, time and other information. Pull down to enter the shortcut control page, here you can set the screen brightness, car control, etc.

7 A/C Adjustment

Touch to adjust temperature, blower speed and air recirculation mode.

8 Shortcut Icons

-  Touch to enter the main system interface.
-  Touch to enter the Navigation interface.

-  Touch to enter the Music interface.
-  Touch to enter the Vehicle Setting interface.
-  Touch to enter the 360 interface.

Page Two



1 Weather

AIR CONDITIONING AND AUDIO SYSTEMS

Touch to enter the Weather interface. Refer to Navigation Manual for details.

2 A/C

Touch to enter the A/C interface. Refer to “A/C Control Interface” in this section for details.

3 Radio

Touch to enter the Radio interface.

4 User

Touch to enter the User interface. Refer to Navigation Manual for details.

5 Phone

Touch to enter the Bluetooth Phone interface.

6 Vehicle

Touch to enter the Vehicle Settings interface.

7 360

Touch to enter the 360 around view interface. Refer to “360 Around View System” section in this manual for details.

8 Video

Touch to enter the Video interface.

9 Setting

Touch to enter the Setting interface.

10 Rescue Call

Touch to enter the Rescue Call interface. Refer to Navigation Manual for details.

11 MG Touchpoint

Touch to enter the MG Touchpoint interface.